

Guardian AngelTM

WINDOW GUARDS

Select the Right Guard Measuring Instructions


The Guardian Angel window guard is available in several sizes. It's important that your windows are measured prior to placing an order to ensure you receive the correct guard. Please be sure to take note of the warnings before proceeding.

WARNINGS

- Before installation, verify local building and fire codes are not being violated.
- This window guard is intended to protect against potential falls by children age 5 and under.
- Window guard must be installed in solid frame material or stud for proper operation.
- There should be no more than a 4-inch opening anywhere in the guarded area.
- Failure to follow all manufacturer's installation and safety instructions may reduce the effectiveness of this product and increase the risk of accidental window falls.
- Do not install a guard horizontally, or a guard meant for double hung windows, in a casement/sliding window. A child could use the guard as a ladder and fall through the unguarded area of the window.
- This product is not intended as a substitute for proper adult supervision.
- Guardian Angel Window Guards are not meant to protect children from intruders.


For more information, please call Automatic Specialties, Inc. at 1-800-445-2370.

Guardian Angel Window Guard - Double Hung Windows

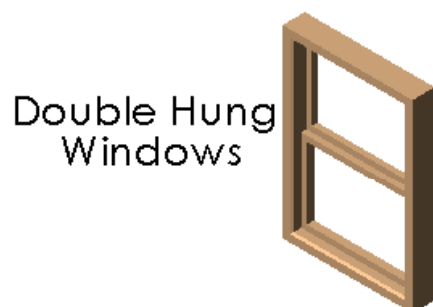

Double hung windows consist of two separate window panels, both of which slide up and down. Typically, sliding the bottom panel upwards opens the window.

Follow the step by step instructions below to properly guard these types of windows.

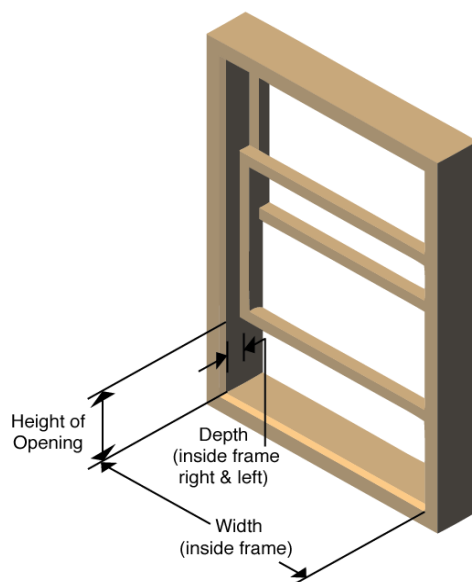

1) Measure the depth of the window frame where the posts will be mounted (inside right and left sides of window frame).

*If the depth of the window frame measure less than $\frac{3}{4}$ inches, the guard will need to be mounted on the outside of the window frame (on the molding or wall around the window). The end posts measure $\frac{3}{4}$ inch wide and need at least that much space for installation.

2) Measure the width inside or outside of the window frame.

3) Measure the height of the window opening with the window fully open.

*The height of the window guard is 21 $\frac{3}{8}$ inches. The window should not exceed this height. If the height of your window's opening measures more than 21 $\frac{3}{8}$ inches, use a window stop to prevent the window from opening above the guard. If the top window panel opens, and it can't be secured, the entire window must be guarded. You will need a vertical style guard. Contact the manufacturer Automatic Specialties at 1-800-445-2370 for more information.

4) Find the total width in the chart below to determine the correct model #.

*If window width falls exactly on the edge of a range, order the model in the larger range.

Example #1: Width equals 23 inches (order model 2335-24H)


Example #2: Width equals 17 inches (order model 1723-24H)

Model No. Chart

Window Width (inches)	Model No.
14 to 17	1417-24H
17 to 23	1723-24H
23 to 35	2335-24H
35 to 58	3558-24H
58 to 90	5890-44H

Cautionary Note:

There should be no more than a 4-inch opening anywhere in the guarded area. This includes the area between the top bar on the window guard and the bottom of the opened window panel (**See Figure 1-2**).

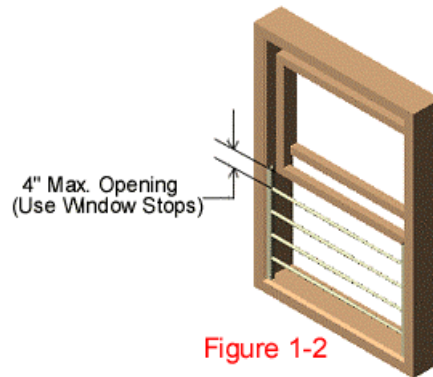

If you are unsure of the model that is required for the window, please contact manufacturer Automatic Specialties, Inc. for assistance.

1-800-445-2370

See next page for a detailed illustration of the Guardian Angel Window Guard.

All double hung window guards measure 21 3/8" high. This includes the side posts. Window openings should not exceed this height. There is approx. 4 inches of space between the top bar and the top of the side posts, which is the maximum space allowed in the guarded area of the window opening.

